


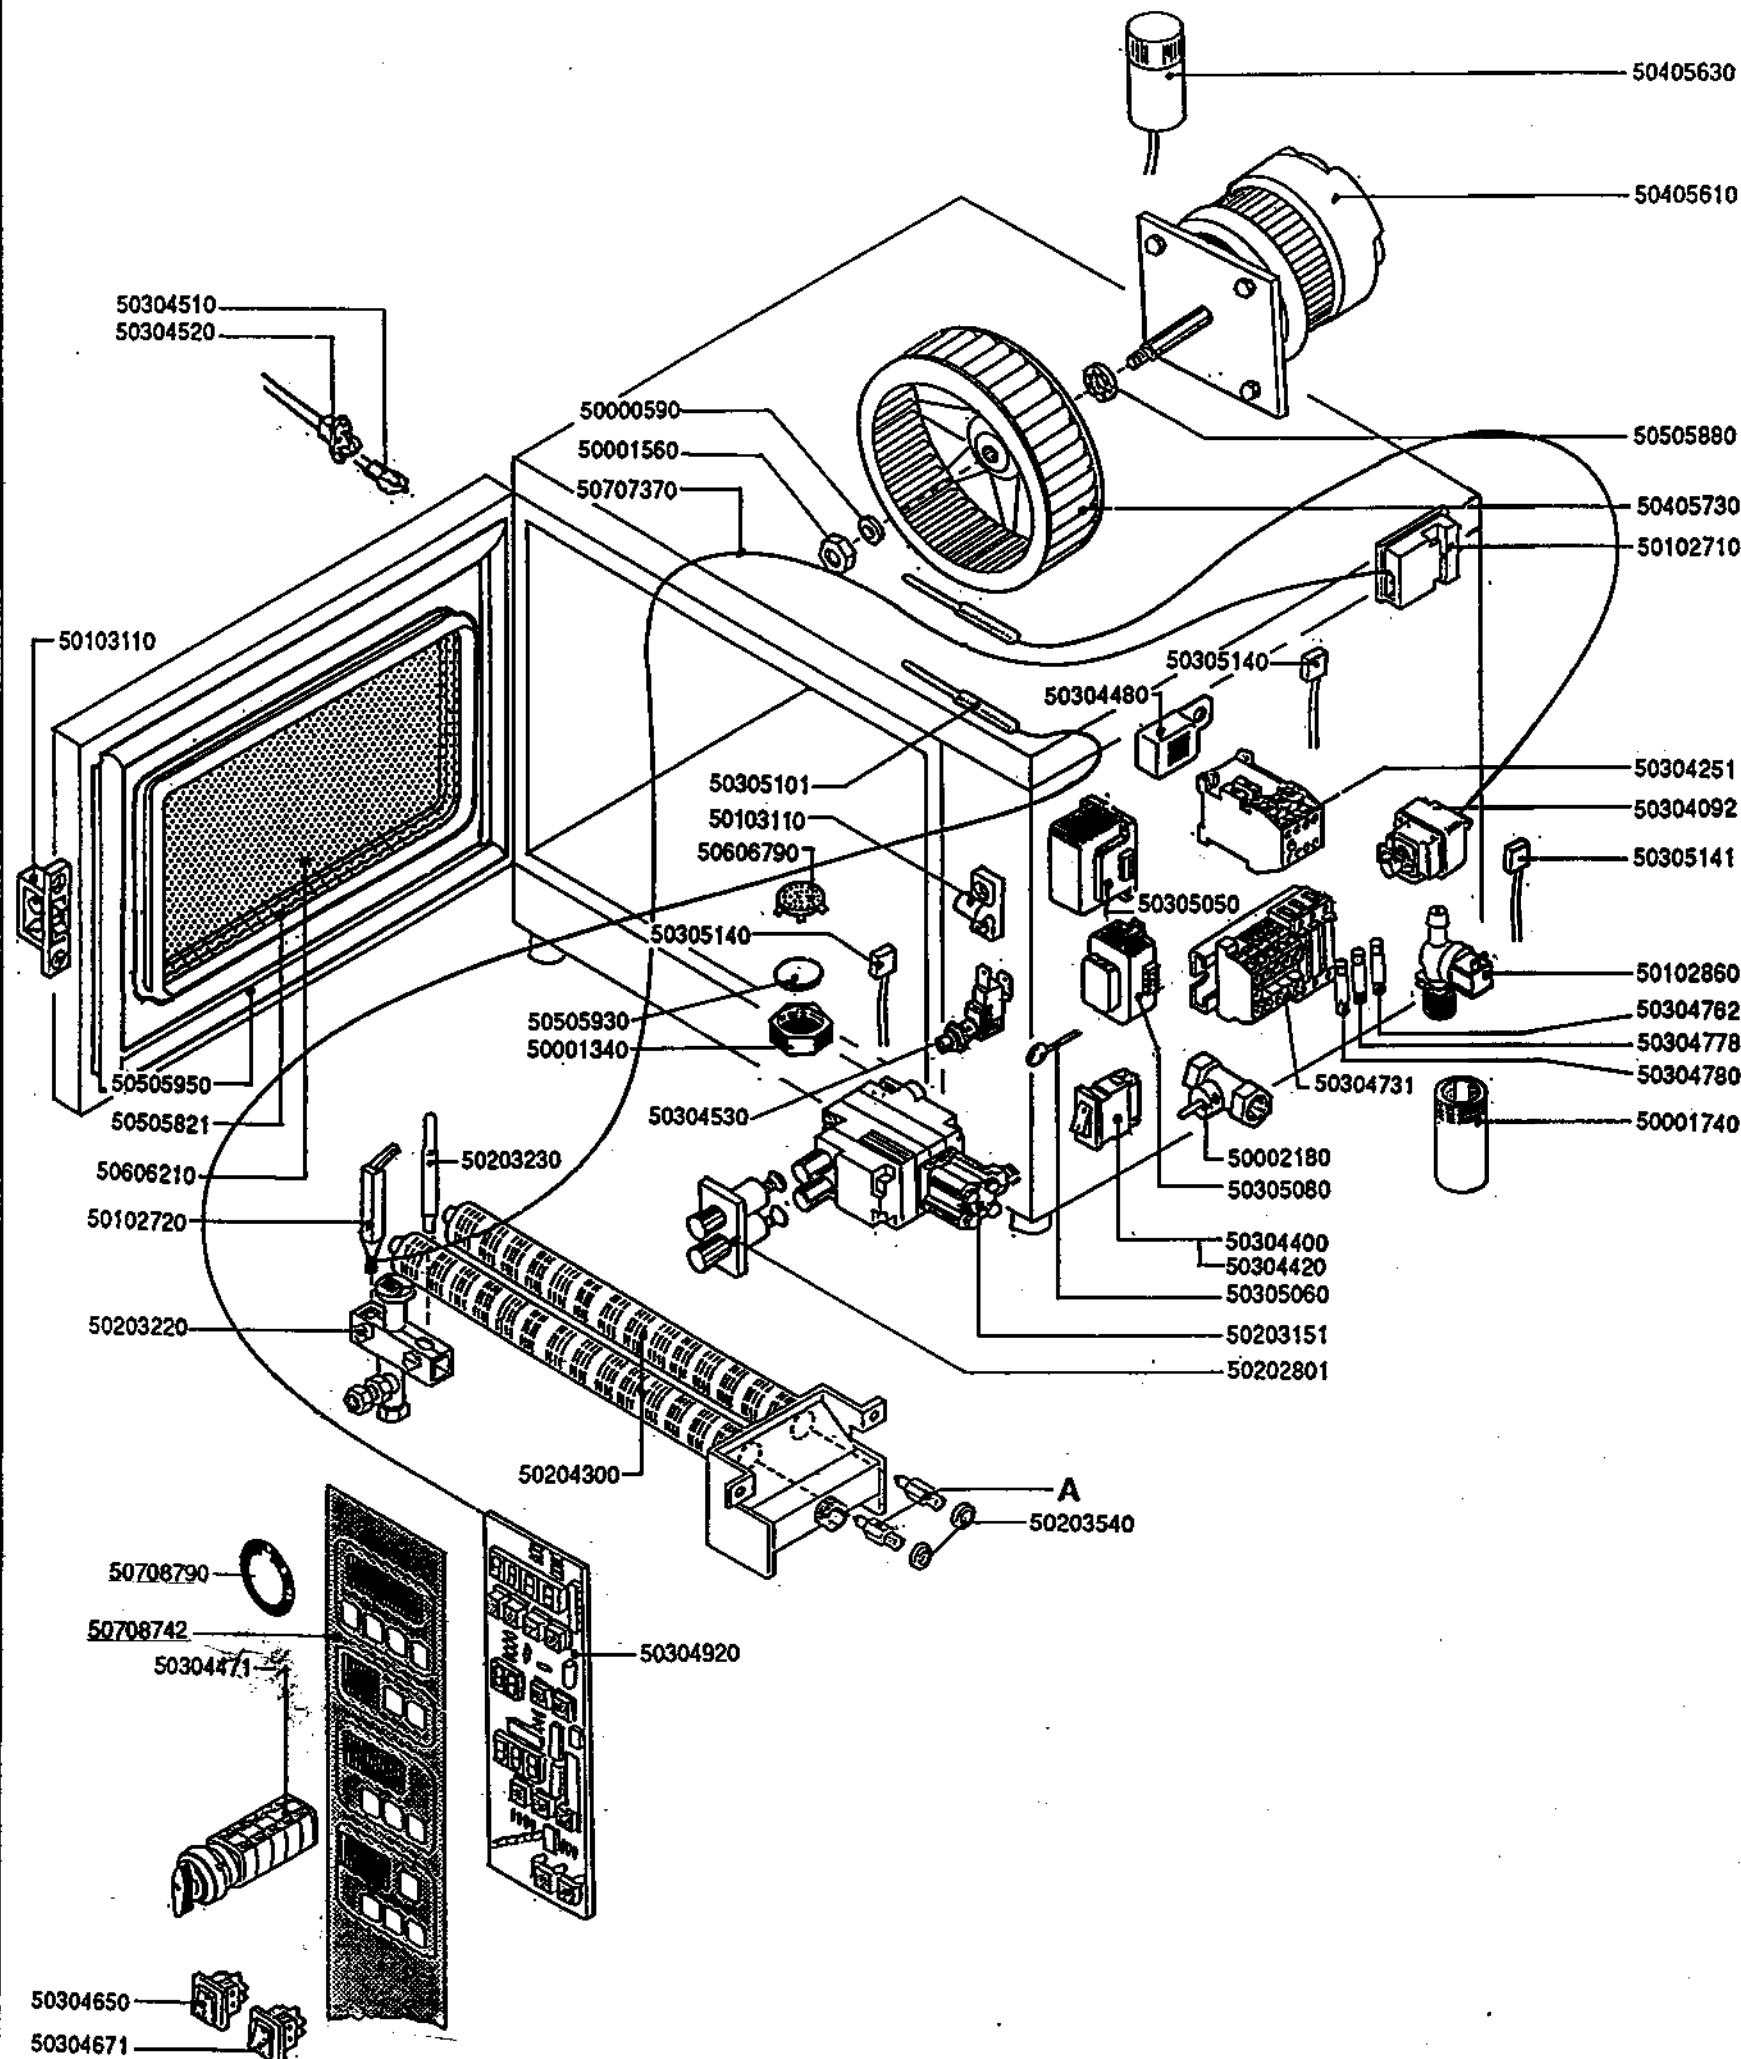

OVEN PG 04 Digital - 220V ~

*	CODE	DESCRIPTION
1	50000590	FAN WASHER
1	50001340	CHAMBER DRAIN CAP
1	50001560	FAN SECURITY NUT
4	50001740	FOOT
1	50002180	BALL VALVE
1	50102710	SPARK IGNITER
1	50102720	SPARK PLUG
1	50102860	SOLENOID VALVE
1	50103110	DOOR CATCHES
1	50202801	VALVE FRONTAL COVER
1	50203151	GAS SOLENOID VALVE
1	50203220	PILOT BURNER
1	50203230	THERMOCOUPLE
2	50203540	NOZZLE GASKET
1	50204300	BURNER
1	50304092	SAFETY THERMOSTAT
1	50304251	CONTACTOR
1	50304400	THERMOMAGN. SWITCH
1	50304480	BUZZER
1	50304510	LIGHT SOCKET
1	50304520	LIGHT
1	50304530	DOOR SWITCH
2	50304650	CURRENT EXCH. SWITCH
1	50304671	SWITCH
1	50304731	TERMINAL BOARD
1	50304762	FUSE
1	50304778	FUSE
1	50304780	FUSE
1	50304920	PRINTED PC BOARD
1	50305050	TRANSFORMER
1	50305060	SUPPRESSOR
1	50305080	TRANSFORMER
1	50305101	PROBE
2	50305140	INTERFERENCE FILTER
1	50305141	INTERFERENCE FILTER
1	50405610	MOTOR
1	50405630	CAPACITOR
1	50405730	FAN
1	50505821	GLASS GASKET
1	50505880	SHAFT GASKET
1	50505930	DRAIN CAP GASKET
1	50505950	DOOR GASKET
1	50606210	GLASS
1	50606790	DRAIN FILTER
1	50707370	SPARK PLUG CABLE
1	50708742	CONTROL PANEL FOIL

OPTIONALS

TWO SPEED FAN

1	50304420	THERMOMAGN. SWITCH
1	50304471	SELECTOR SWITCH
1	50708790	EXTERIOR COVER 2 S.

A NOZZLE (see Service Manual)

* no. PIECES PER MODEL

NOTE: When ordering spare parts i. e. motors, contactors, thermomagnetic switch, please specify, voltage and frequency of the equipments, as well as the part code no. as indicated on the part list.