




**USER'S MANUAL
COMBINATION OVEN
WITH STEAM GENERATOR
ELECTRIC (EM) - GAS (GM)
D/H VERSION
EN**

Technical service



CONTENTS

	PAGE
1 • GENERAL REMINDERS	3
2 • POINTS TO REMEMBER	4
3 • DESCRIPTION OF KEYS	5
4 • STARTING ONE-PHASE MANUAL COOKING	7
5 • STARTING MANUAL COOKING WITH TWO OR MORE PHASES IN SEQUENCE	8
6 • SETTING THE CORE PROBE (VERSION H ONLY)	9
7 • CORE PROBE + ΔT SYSTEM (VERSION H ONLY)	10
8 • HINTS ON USING THE CORE PROBE (VERSION H ONLY)	12
9 • AUTOMATIC HUMIDITY CONTROL SYSTEM (VERSION H ONLY)	13
10 • REHEAT PROGRAM (VERSION H ONLY)	14
11 • OPERATING DETAILS	17
12 • PRACTICAL ADVICE	19
13 • DAILY CLEANING	20
14 • ROUTINE MAINTENANCE	21
15 • DESCALING THE BOILER	21
16 • MAJOR SERVICING	23
17 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION	23

ELECTRIC MODELS	GAS MODELS
6 x GN 1/1	6 x GN 1/1
10 x GN 1/1	10 x GN 1/1
10 x GN 2/1	10 x GN 2/1

VERSIONS

D Electronic with cooking sequences and humidifier.

H Electronic with cooking sequences, automatic humidity control, twin speed, core probe and lighting.

The manufacturer accepts no liability for any inaccuracies in this manual attributable to printing or copying errors. We reserve the right to modify our products as we deem fit, without impairing their basic features.

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

donadini & c. advertising © - 016.38.122 - 22.11.2000

1 • GENERAL REMINDERS

Repairs may become necessary over time; these and all major servicing operations must be entrusted exclusively to a Lainox technician or a Lainox authorized service agent.

- 1.1 • **Carefully read** the directions given in this manual; they contain important information on safety during installation, operation and maintenance.

Keep the manual in a safe place for future consultation!

- 1.2 • This appliance must be put only to the use **for which it is specifically intended**, i.e. cooking foods. Any other type of use is improper and therefore dangerous.

- 1.3 • Only trained kitchen staff should be allowed to use the appliance.

- 1.4 • The oven must not be left unattended during operation.

- 1.5 • There are surfaces of the oven that become hot during operation. Take care!

- 1.6 • Ask the installer for information on correct operation and use of the water softener; incorrect or incomplete regeneration of the resins will result in inadequately treated water, which could damage the oven.

- 1.7 • Should it become necessary to call out a service technician, all essential identification details of the appliance are shown on the data plate.

					
TYP. VE 106 "X"				2000	
NR xxxxxxxxxxxx					
3N	AC	400	V	50 Hz	
		8	kW	kPa 150 - 500	
IPX 5					

L®		
LX TYP. VG 110 "P"		TYP.
2000	NR xxxxxxxxxxxx	
AC 230 V	50 Hz	1.00 kW
		kPa
	Σ Qn 20 kW	50 - 500
A1 ☐	B11 ☒	B21 ☐
IT	Cat. II 2H3+ II 1a2H	P mbar 20; 28-30/37 8; 20
IPX 5		
CE 0085		

- 1.8 • In the event of technical assistance being required, **the trouble must be described in as much detail as possible**, so that a service technician will be able straight away to understand the nature of the problem.

- 1.9 • **The room** in which the oven is to operate **must be well ventilated!**

- 1.10 • In the event of breakdown or faulty operation, **switch off the oven immediately!**

2 • POINTS TO REMEMBER

- 2.1 • Before any food is cooked in a new oven, the interior must be thoroughly cleaned (see the “Daily Cleaning” heading).
- 2.2 • At the end of the working day, clean the oven thoroughly inside and out; this will ensure smooth operation of the appliance and prolong its useful life.
- 2.3 • **Do not use high pressure water jets when cleaning the oven!**
- 2.4 • For daily cleaning, **use non-corrosive products** (alkali based) suitable for the purpose. Abrasive materials and products should not be used as they will damage the surfaces.
- 2.5 • Always switch off the appliance when work is finished, and shut off all energy supplies (electricity, water, and gas if connected).
- 2.6 • **Avoid** any operation that might cause cooking **salt to be deposited** on the steel surfaces of the oven; if salt is accidentally spilled, rinse off immediately and thoroughly.
- 2.7 • After steam cooking, **open the door carefully** to avoid being hit by the rush of residual steam escaping from the oven. Failure to observe this warning may be dangerous for the operator.
- 2.8 • To ensure safe operation of the oven **do not obstruct the vents or any other opening in the casing!**

- 2.9 • **To ensure long term efficiency and reliability of the oven, major servicing should be carried out at least once a year. With this in mind, customers are recommended to sign a service agreement.**

Failure to observe basic safety guidelines may jeopardize the smooth operation of the oven and expose the operator to serious danger!

The manufacturer accepts no liability if the original function of the oven is altered or there is tampering or failure to observe the instructions given in the manuals.

3 • DESCRIPTION OF KEYS

FOREWORD

This page describes the **control indicators** (which signal any fault occurring during operation), the **service keys** (which, at any moment, activate the additional services available, provided that the oven is working and the LED of key **28** is permanently alight), the **additional functions** (which activate special cooking methods, described in detail on the following pages) pertaining to the model and version shown on the previous page.

3.1 • CONTROL INDICATORS

4 No water indicator light.


1 Fault display.

3.2 • IMMEDIATE RESPONSE FUNCTIONS

Rapid cooling key with oven hot and door open. Open the door and press key **30**: ventilation is activated to lower the oven temperature rapidly down to 50°C. This function can be used after a cooking operation that is to be followed by another one using a much lower temperature.

Temporary manual oven moisture inlet key. Keep key **38** pressed for as long as you like: water is sprayed into the oven, increasing its humidity level. This function is activated only in convection and combination modes, and is useful for foods that require added humidity when cooking.

Open oven vent key. This function can only be activated in convection mode. The oven vent opens (LED permanently alight for version H only), pressing key **27** or turning the butterfly valve **39** for version D, evacuating the excess moisture in the oven

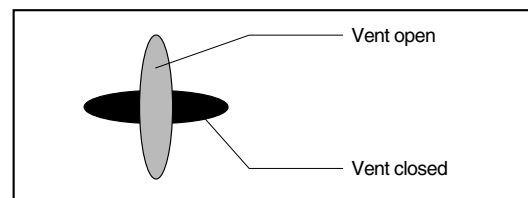

FOR VERSION H ONLY

Note: The position of the vent can be saved. For example:
phase 1 = vent closed;
phase 2 = vent open.

Oven light key. Pressing this key, the oven light will come on for a timed duration (standard duration 20 seconds. Call your technical service centre if you wish to change this setting).

Note: The appliance is fitted with an automatic system for lowering the temperature that operates in all cooking modes. If the temperature exceeds the display setting by 30°C the humidifier automatically directs cold water into the oven and the temperature is rapidly lowered. This precludes the possibility that food could start cooking with too high a temperature in the oven. In addition, the added moisture prevents dishes from drying up.

3 • DESCRIPTION OF KEYS

Steam generator pre-heating exclusion key 47.

Pre-heating is automatically activated when the oven is switched on. Press this key to exclude automatic pre-heating. This function is useful when during the day no cooking is required that needs the steam generator. This enables considerable energy savings due to the steam generator heating elements being deactivated.

LED on constantly: steam generator pre-heating temperature reached.

LED off: steam generator pre-heating deactivated.

LED blinking: steam generator pre-heating temperature not reached.

In combination mode, if the steam generator has not reached pre-heating temperature, when you press key **(28)** cooking does not start immediately and the LED continues to blink (temporary stop). Cooking starts automatically when the boiler reaches the pre-heating temperature (LED permanently alight).

3.3 • ADDITIONAL FUNCTIONS

Reheat program selection key 37.

FOR VERSION H ONLY

Normal/low fan speed selection key. The normal speed is usually activated (left LED permanently alight); pressing key **11** activates the low speed (right LED permanently alight). The low speed is particularly useful when cooking delicate foods. This function automatically activates energy saving.

Temperature control key 24 with Δt combined with the core probe.

4 • STARTING ONE-PHASE MANUAL COOKING

OPERATIONS

4.1 • SWITCH ON

Press key **5** to switch on.

4.2 • SELECT

Select the cooking mode: convection **10**, steam **13**, combination **12**.

4.3 • SET

Set the cooking **temperature** with knob **18**.

4.4 • SET

Set the cooking **time** with knob **21**.

Or

you can set the cooking **temperature** regulated by the core probe in the product by using the keys **23**.

4.5 • START

Start the oven by pressing key **28** (LED permanently on).

4.6 • END OF COOKING

If infinite time [**inf**] has been selected, switch off the oven manually using key **28** (LED alongside key OFF).

If a cooking time or core probe temperature has been entered, a beep of approx 5 seconds duration will be generated at one minute intervals when the time expires or the temperature has been reached, to indicate that cooking has terminated and the oven has switched itself off (LED next to key **28** off).

Just open the door to stop the beeping.

Remove the food from the oven, following the directions given under paragraph 2.7 of the “*Points to remember*” heading.

Note: Combined steam cooking.

On switching on the appliance, the boiler empties and then reloads with clean water. Therefore, when starting a cooking process that utilizes steam (steam or combined mode), it is recommended to preheat the oven, empty, in combined mode so that when cooking commences the steam in the boiler is ready for use.

5 • STARTING MANUAL COOKING WITH TWO OR MORE PHASES IN SEQUENCE

OPERATIONS

5.1 • SWITCH ON

Press key **5** to switch on.

5.2 • SELECT

Select key **3** to select the cooking phase [**1**].

5.3 • SELECT

Select the cooking mode: convection **10**, steam **13**, combination **12**.

5.4 • SET

Set the cooking **temperature** with knob **18**.

5.5 • SET

Set the cooking **time** with knob **21**.

OR

you can set the cooking **temperature** regulated by the core probe in the product by using the keys **23**.

5.6 • SELECT

Press key **3** to select the cooking phase [**2**]. Set the cooking mode, temperature and time as described in previous headings.

5.7 • SELECT

Press key **3** to select the cooking phase [**3**]. Set the cooking mode, temperature and time as described in previous headings.

5.8 • START

Start the oven by pressing key **28** (LED permanently on).

5.9 • END OF COOKING

If infinite time [**inf**] has been selected, switch off the oven manually using key **28** (LED alongside key OFF).

If a cooking time or core probe temperature has been entered, a beep of approx 5 seconds duration will be generated at one minute intervals when the time expires or the temperature has been reached, to indicate that cooking has terminated and the oven has switched itself off (LED next to key **28** off).

Just open the door to stop the beeping.

Remove the food from the oven, following the directions given under paragraph 2.7 of the “*Points to remember*” heading.

6 • SETTING THE CORE PROBE

FOREWORD

The core probe allows cooking to be regulated by monitoring the temperature at the core of the product. This device

overrides the time setting, and cooking stops as soon as the temperature at the core of the product reaches the selected value.

OPERATIONS

6.1 • COOKING WITH THE CORE PROBE

Once the oven temperature has been set (as described in the relative headings), press the keys **23** to enter the desired core temperature.

Insert the probe into the food (see “*Hints on using the core probe*”), plug the lead into the panel socket (**36**) and proceed according to the cooking mode selected. Therefore, if you have chosen...

If, when setting the core probe, **knob 21 is turned** to the left to select infinite time and cooking then started, **the food can be held at the set temperature when cooking is completed**. The dish will keep warm until such time as the cycle in progress is interrupted (e.g.: by opening the oven door).

PRACTICAL EXAMPLE

Setting

Mode: **Convection (10)**

Oven temperature: **140 °C (18)**

Time: **Infinite (21)**

Core temperature: **78 °C (23)**

What happens

Once the temperature at the core of the food reaches 78 °C, with the oven temperature at 140 °C, the heat source shuts off and will automatically come into operation again when the core temperature drops by 1 °C. In practice, it is no longer the oven temperature setting that regulates the operation of the heat source, but the temperature selected for the core probe.

6.1a •

MANUAL COOKING, ONE PHASE:

press key **28** to
start cooking.

6.1b •

MANUAL COOKING WITH TWO OR MORE PHASES IN SEQUENCE:

pass on to setting the
next phase or press key
28 to start the first
phase of the selected
cooking mode.

Note: When cooking in manual mode using two or more phases, the electronics do not permit entering a cooking phase with the core probe after any cooking phase with infinite time.

6 • SETTING THE CORE PROBE

Advice

Once cooked, food can of course only be kept warm for a limited period of time, which must not exceed current health and hygiene regulations.

Advantages

Food can be kept as if “freshly cooked” for as long as you like, without the operator doing anything, consuming extremely little power.

The succulence of the food remains undiminished.

The holding temperature is precise to within 1 °C.

Ideal for large items of food.

Note: *Using this system of cooking and holding with the convection mode, it is possible to combine automatic humidity control, which creates the ideal humidity avoiding drying up the product.*

7 • CORE PROBE + ΔT SYSTEM

FOREWORD

The Δt function allows the core probe to be used while maintaining a constant difference between the temperature at the core and the temperature in the oven.

With the Δt system, food need not be

assailed by high temperatures, but instead can be uniformly cooked and remain tender, while shrinkage is also considerably reduced.

OPERATIONS

7.1 • COOKING WITH THE ΔT SYSTEM

Once the oven temperature and the core probe temperature have been set (as described in the relative headings), press key **24**; Insert the probe into the food, as described in “*Hints on using the core probe*”, plug the lead into the panel socket **36** and proceed according to the cooking mode selected. Therefore, if you have chosen ...

7.1a •

**MANUAL COOKING,
ONE PHASE:**
press key **28**
to start cooking.

7.1b •

**MANUAL COOKING,
TWO OR MORE PHASES:**
pass on to setting the
next phase or press
key **28** to start the first
phase of the selected
cooking mode.

7 • CORE PROBE + ΔT SYSTEM

OPERATIONS

PRACTICAL EXAMPLE

Setting

Mode: **Combination (12)**

Oven temperature: **120 °C (18)**

Core temperature: **68 °C (23)**

What happens

From the settings, the electronics determine the Δt , which does not have a fixed value, but is a function of the data entered (for example: 120 °C - 68 °C = Δt 52).

When started, the oven rapidly heats to the Δt value + the temperature already existing at the core of the food. The oven will then be regulated in such a way that the difference between the two temperatures remains constant, i.e. equal to the determined Δt value.

Ideal for:

large items, fresh and delicate or unseasoned meats, fibrous meats, game.

Advantages


During cooking, the heat penetrates the food gradually and uniformly, rendering it succulent, soft and tender and avoiding any hint of burning on the surface. Shrinkage is much less than with any other cooking mode, so that the specific yield of the product is greater.

Cooking can be carried out during dead time, and operating costs thus reduced.

Flavour and firmness are maintained at optimum levels.

Advice

This type of cooking takes longer; the lower the Δt the longer the time, but the greater the yield. The values to enter for the oven temperature should not exceed 130/140 °C. If the product requires browning, a final convection phase at a higher temperature is required.

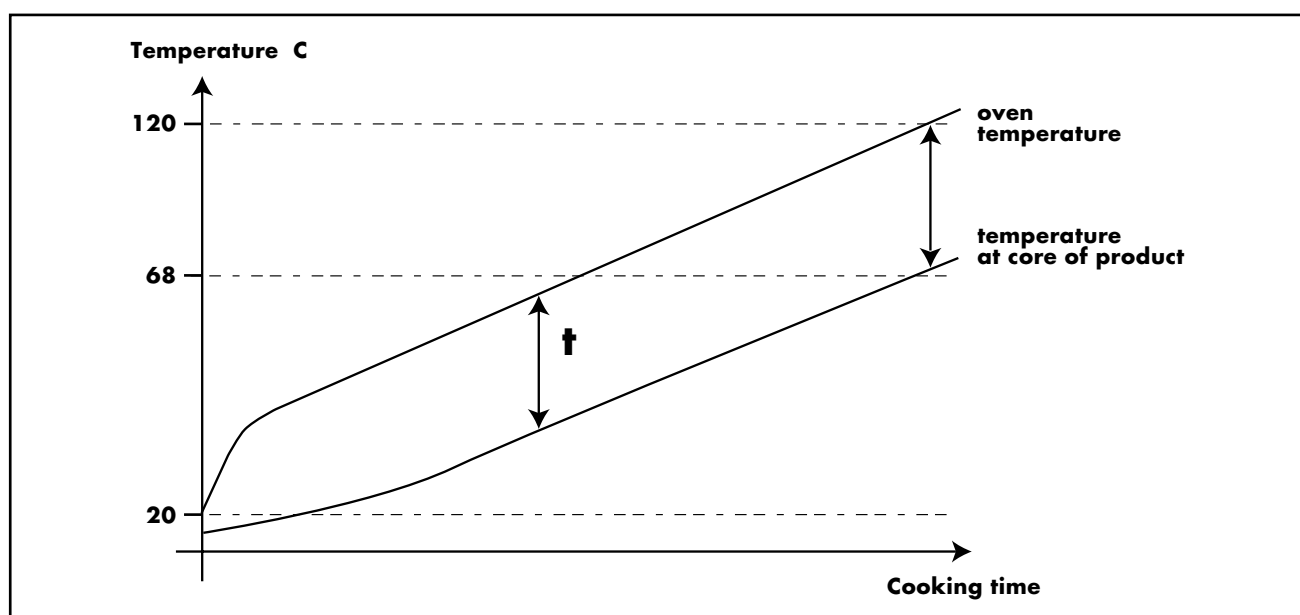

8 • HINTS ON USING THE CORE PROBE



In cooking with this device, the position of the core probe is extremely important. The probe must be positioned from the top downwards at the centre of gravity of the food to cook and be fully inserted. In pieces whose thickness is less than twice the probe, this is inserted horizontally to the tabletop so that the tip of the probe is anyhow in the middle of the food (see figure).

It is also recommended that the probe be inserted with the food positioned at the centre of the oven.

Optional: *On request and without any specific adaptation, it is possible to connect the needle probe to the front panel to control the temperature of vacuum-packed foods.*

Advantages

- Improves control over the cooking process, eliminating the risk of loss and waste;
- Permits accurate cooking irrespective of the quality or mass of the product;
- Saves time because cooking control is automatic;
- Guarantees hygiene; with precision monitoring of the core temperature, there is no need for food to be handled, poked or prodded.

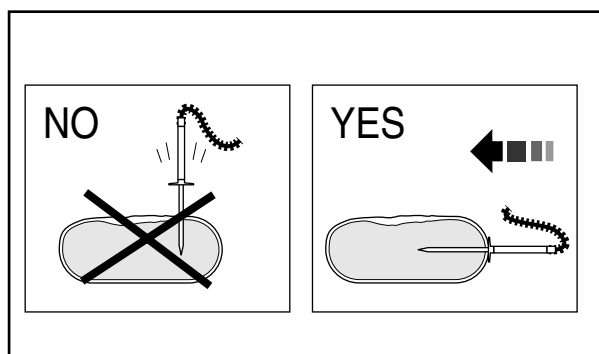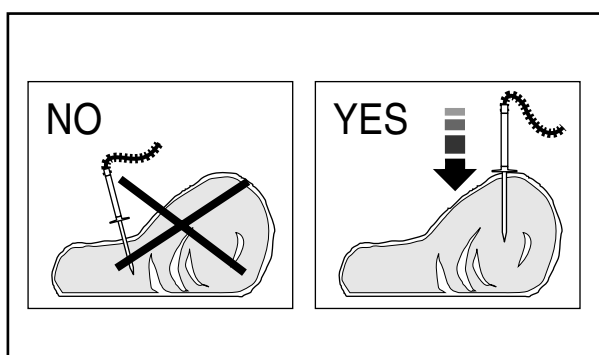

Cooking with the core probe is ideal for:

- large items that require cooking in a particular way at the core (roast-beef, salmon, etc.);
- cooking vacuum-packed products (using the needle probe, optional).

9 • AUTOMATIC HUMIDITY CONTROL SYSTEM

FOREWORD

The automatic humidity control system makes it possible to keep a constant level of humidity in the oven when cooking by convection. It performs a twofold function, it does not work by only introducing moisture, but also (version H only) by extracting the moisture of the product when it exceeds the set value.

Especially advantageous for fresh products that cannot have the same moisture

content from one day to another, but which when cooked will always have the same aspect and firmness.

This system is recommended in particular for cooking different quantities of the same type of food, in order to maintain a balanced cooking atmosphere: with the oven half full, the level of humidity is increased by the system, whereas with the oven full, the vent opens automatically to release excess moisture.

OPERATIONS

9.1 • COOKING WITH THE AUTOMATIC HUMIDITY CONTROL SYSTEM

Note: *The cooking mode must be convection!*

Once the oven temperature or the core probe temperature have been set (as described in the relative headings), press key **38**. The display shows [**HO**] and, within approximately 2 sec., enter the required automatic humidity control value, from 1 (very dry) to 99 (99% relative humidity). Put the food in the oven and, if the probe is set, insert the probe in the food (see under the “*Hints for using the core probe*” heading), plug the probe into the panel socket (**36**) and then proceed with the chosen method of cooking.

Therefore, if you have chosen ...

Note: *The vent must be closed.*

Advice

Definition of the automatic humidity control value requires a certain amount of practical experience.

Nonetheless, it is impossible to commit a catastrophic error, and this function undoubtedly enhances the appearance of the food.

Ideal for:

Foods that tend to dry up, or small items or foods that release excess humidity and when reheating especially on a plate.

Advantages

Repeatable results, even when foods are cooked together with others having different characteristics.

9.1a • MANUAL COOKING, ONE PHASE: press key 28 to start cooking.	9.1b • MANUAL COOKING, TWO OR MORE PHASES: pass on to setting the next phase or press key 28 to start the first phase of the selected cooking mode.
--	---

10 • REHEAT PROGRAM

FOREWORD

The reheat program is part of an organized kitchen management system:

cooking → cooling → conserving → reheating
→ service.

Foods can be reheated either in a pan or on a plate. The memory holds up to 5 programs, of which the first two are preset by the manufacturer.

OPERATIONS

10.1 • SWITCH ON THE OVEN

Press key 5. A short beep indicates that the self-diagnosis routine has been completed. If a symbol appears in the fault warning display, refer to the “*Self-diagnosis and fault identification*” heading.

10.2 • SELECT THE REHEAT PROGRAM

Note: Programs R1 and R2 are already stored in memory.

Press key 37, the left LED remains permanently alight. This indicates the R1 reheat program has been selected. To select the R2 program, press the key a second time, the right LED remains permanently alight.

10.3 • PROGRAMS ALREADY INSTALLED R1 AND R2

Values already set for program R1

Mode: **Convection (10)**
Fan speed: **Normal (11)**
Oven temperature: **130 °C (18)**
Time: **Infinite (21)**
Humidity: **20% (38)**

Values already set for program R2

Mode: **Combination (12)**
Fan speed: **Normal (11)**
Oven temperature: **130 °C (18)**
Time: **Infinite (21)**
Humidity: **40% (38)**

Note: With the reheat program it is possible to use the combination mode setting with automatic humidity control or with the vent open. This is particularly suited for reheating food on a plate to prevent condensation forming on the plate.

10.4 • MODIFICATION OF PROGRAMS R1 AND R2

Press key **3** to access the setting. Carry out the single programming operations in succession within approximately 5 sec., otherwise, to access programming again, press key **3** again.

The display **3** shows no.1 flashing (phase 1).

Select the preheat mode, if different to the one prompted.

Change the fan speed, if necessary (version H only), remembering that this will reduce the heat output of the oven in operation.

Enter the oven temperature.

Set the time, which generally will be infinite, by turning the relative knob, or enter the core probe temperature (version H only), it is advisable to use the needle probe for particularly thin or small items, using keys **23**, if the size and consistency of the food permit.

At this point we recommend entering the automatic humidity control function, see under the relevant heading or open the vent. Wait for a few seconds for the data to be saved, when a sequence of 5 beeps indicates that the save has taken place.

What happens

Start the program after introducing the food in a pan or on a plate. As the two preset programs are not regulated by the core probe, additional care needs to be taken in the programming of reheat times until a certain familiarity with the system has been acquired.

Advice

Reheating is intended as a process of warming previously cooked foods to a nominal serving temperature of 65 °C at the core. This must take place as quickly as possible, clearly observing the local health and hygiene regulations.

For deep-frozen and/or frozen products, the oven temperature is set to 160 °C and the food exposed to the heat for a few minutes until defrozen sufficiently to allow insertion of the core probe; obviously, the program needs to be temporarily modified.

Advantages

This system makes it possible to present the food “freshly cooked” as regards its appearance, flavour and firmness, even after a few days’ conservation at +3 °C.

The appliance is versatile as it can perform differentiated functions without the aid of additional equipment.

10 • REHEAT PROGRAM

STARTING THE REHEAT PROGRAM

OPERATIONS

Place the food to reheat in the oven, following the directions given under the *“Practical Advice”* heading.

Insert the core probe (see *“Hints on using the core probe”*).

10.5 • START

Press key **28**: the LED associated with the key stays on permanently.

At this point ...

the temperature display indicates the actual oven temperature.

The time display:

- indicates [**inf**], if infinite time has been set;
 - counts the operating time, if the core probe is active;
 - indicates the remaining time, if a time has been set.
-

10.6 • END OF COOKING

To stop the reheat program, just open the door.

Remove the food from the oven, following the directions given under paragraph 2.7 of the *“Points to remember”* heading.

Displaying entered values

If, during reheating, it is necessary to check the set values, press key **37**.

11 • OPERATING DETAILS

FOREWORD

During cooking (LED permanently on), the displays show the actual values. It is

anyhow possible to check the set values. In this connection, proceed as follows:

OPERATIONS

11.1 • DISPLAYING SET VALUES DURING COOKING (without stopping)

Press the key of the cooking mode previously selected (corresponding LED on steady). You hear a beep and the display shows the values set beforehand. After 5 sec. the real values reappear.

11.4 • CHANGING THE TEMPERATURE SET FOR THE CORE PROBE

Keep one of the keys **23** pressed to enter the new value; then you hear a beep and the display shows the value you have just set. After 5 sec. the real values reappear.

11.2 • CHANGING SET VALUES DURING COOKING (WITHOUT STOPPING)

11.2 a • TEMPERATURE AND TIME

To change the value, press first the cooking mode and then turn the relevant knob to enter the new value (to the right, increase - to the left, decrease); you then hear a beep, the displays show the values you have just set, after 5 sec. the actual values reappear.

11.2 b • COOKING MODE

Press the key associated with the new cooking method, the associated LED will light up; then you hear a beep and the display shows the value you have just set, after 5 sec. the actual values reappear.

11.2 c • AUTOMATIC HUMIDITY CONTROL

Press the key for the selected cooking mode (corresponding LED permanently on, you then hear a beep) and then press the automatic humidity control function key (the display shows [H..], the value entered previously). Turn the knob to set the new value. After 5 sec. the real values reappear.

Version H only

11.3 • CHANGING THE FAN SPEED

Press the fan speed key **11**. The led corresponding to the new speed setting will light up (left-hand LED = normal speed; right LED = low speed); after 5 seconds a beep indicates that the speed has been changed.

11.5 • FORCING COOKING PHASES IN A MANUAL PROGRAM WITH TWO OR MORE PHASES IN SEQUENCE

If you wish to skip a cooking phase or complete it sooner, press and hold the key **3** for approximately 3 sec.; the display will automatically show the next phase.

11.6 • TEMPORARY STOP

Open the oven door or press key **28**: the corresponding LED blinks. Cooking stops and the timer pauses until such time as the door has been closed or key **28** pressed a second time. Cooking will resume automatically from the point at which the interruption occurred.

11.7 • PERMANENT STOP

To stop or permanently interrupt a cooking program for which infinite time is set, press key **28** and hold for at least 3 seconds. A continuous beep confirms the end of the cooking operation as if the full time had elapsed, and the LED associated with key **28** goes out.

FOREWORD

The following holds for the reheat program only

11.8 • DISPLAYING THE VALUES SET DURING THE CURRENT PHASE (without stopping)

Press key **37**, you then hear a beep. The display shows the values set previously. After 5 sec. the real values reappear.

11.9 • CHANGING THE VALUES SAVED IN PROGRAMS R1 AND R2 WHILE COOKING IS IN PROGRESS

To modify a reheat program, press key **37**, you then hear a beep. The display shows the values set previously. Use the controls to change the values attributed to the program according to the instructions given in the “*Changing set values during the cooking phase (without stopping)*” heading.

Note: *If the reheat program has two working phases and you wish to display and/or change phase 2, follow the above instructions, then press key 3. The displays will show the values set in phase 2; After 5 sec. the real values reappear.*

12 • PRACTICAL ADVICE

12.1 • PREHEATING THE OVEN

The oven preheating phase is extremely important and useful for successful cooking.

As a general rule, always preheat the oven when empty, setting the temperature approx. 20% higher than that to be utilized subsequently in cooking.

In the case of steam cooking, preheat the empty oven using convection mode as this will allow temperatures of over 100°C to be selected.

12.2 • COOKING LOADS

The depth of the pan must be suitable for the height of the food.

For uniform cooking it is preferable to distribute the load over several shallow pans rather than loading just one extremely deep pan.

Keep to the weights specified in the following table:

Model	No. pans	Load per pan	Maximum oven load
6 x GN 1/1	6 x GN 1/1	4 kg	24 kg
10 x GN 1/1	10 x GN 1/1	4 kg	40 kg
10 x GN 2/1	10 x GN 2/1	8 kg	80 kg

Note: When loading the oven you should clearly consider not only the weight of the product, but also its size, firmness and thickness.

12.3 • FROZEN/DEEP-FROZEN PRODUCTS

The oven must be preheated and loaded respecting the quality and nature of these foods. For example, frozen spinach must not be hit with temperatures that are too high as, due to its nature, it could dry out on the outside and impair the result.

12.4 • TYPES OF CONTAINER

For optimum results, it is vital to use the right pan for the different kinds of food: aluminium or aluminium plate for confectionery and baked foods, perforated pans for steam cooking, mesh pans for pre-fried potatoes.

12.5 • CLEARANCE BETWEEN CONTAINERS

When loading the oven with the food to cook, it is recommended to pay special attention there is sufficient clearance between containers. This makes it possible for the heat and air to distribute evenly for a more uniform result, which would not be possible if the food in one pan were in contact with the pan above.

12.6 • LESS SEASONING

By using this type of oven it is possible to virtually eliminate the use of seasoning, oil, butter, fat and flavouring. Minimizing the use of such ingredients in cooking, the natural flavours of the food are highlighted and the nutritional content remains intact, bringing the benefits of a more diet-conscious type of cuisine.

13 • DAILY CLEANING

13.1 • THOROUGH CLEANING ...

... is a prerequisite for faultless cooking and better yields:

- the food's own flavour remains unchanged;
- during operation, there are no fumes caused by previous remains of food that burn;
- energy savings;
- less maintenance work and a longer service life;
- in addition, the simplicity of the procedure means that a thorough clean can be carried out quickly and with minimum inconvenience to the operator:
 - 5 minutes approximately to spray clean
 - 20 minutes steam cycle
 - 5 minutes rinsing
 - 5 minutes drying

13.2 • WARNING

Never use direct or high-pressure jets of water to clean the outside of the oven.

Never use corrosive and/or abrasive substances on steel surfaces, and avoid scouring or scrubbing with steel wool or wire brush, as irreparable damage could occur. Similarly, **aggressive detergents** of non-alkaline formulation containing high percentages of sodium and ammonia **can soon damage the seals, jeopardizing oven efficiency and operation.**

The outside of the oven is washed with a sponge and warm water with an ordinary detergent suited to the purpose.

OPERATIONS

13.3 • CLEANING THE OVEN AT THE END OF WORK

Proceed as follows:

1 • Switch on the oven.

2 • Press key **30**, let the oven cool to approx. 60 °C; if the oven is cold, preheat it with steam to 60 °C.

3 • Open the door and proceed to remove any cooking spills, using a spatula that will not scratch the steel surface, then spray the inside with a proprietary oven cleaner. Use a non-corrosive alkaline product. Close the door and allow the chemical to act for the time indicated by the manufacturer, generally between 5 and 10 minutes.

4 • Press key **13**.

5 • Set a temperature of 100 °C, for a time of 10 minutes.

6 • Press key **28** to start the cleaning cycle. At this point, switch off the appliance completely and open the oven door slowly.

7 • Rinse the oven thoroughly with plenty of clean water and wipe the door seals with a sponge. The use of a hand-held shower (optional) is recommended.

8 • Switch on again, and select a convection cycle of about 5 minutes' duration.

9 • Stop and shut off all utilities (electrical power supply, water, and gas if connected). Leave the door slightly ajar when the appliance is not in use.

14 • ROUTINE MAINTENANCE

14.1 • PERIODICALLY ...



... the deflector and pan racks should be cleaned as required.

In this connection, proceed as follows:

- Stop and shut off all utilities (electrical power supply, water, and gas if connected);
- take out the pan racks;
- unscrew the deflector screws with the right sized screwdriver;
- remove the deflector and wash thoroughly under running water or in a dishwasher;
- for best results when washing and rinsing the oven, the use of a hand-held shower (optional) is recommended;
- dry with a clean cloth;
- refit the deflector and secure in place with the two screws.

14.2 • PROLONGED IDLE PERIODS

If the oven is to stand idle for any length of time (e.g. holidays or seasonal closing) it must be cleaned thoroughly, leaving no traces of food or dirt. Leave the door slightly ajar so that air can circulate inside the oven. Be absolutely certain to shut off all utilities (electrical power supply, water, and gas if connected). For added care after cleaning, the external surfaces can be protected by applying a proprietary metal polish.

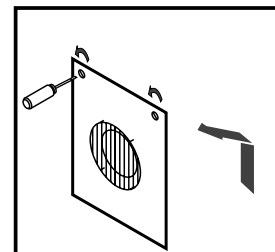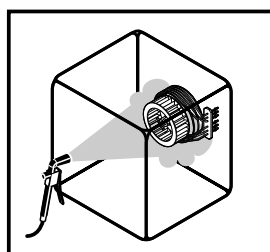

15 • DESCALING THE BOILER

The operation of descaling the steam generator should normally be carried out in the morning, before running normal cooking cycles, with the appliance unheated and already clean (see the “*Daily cleaning*” heading). The frequency of this operation depends on the hardness of the water used in the boiler and the number of hours of operation.

The formation of scale will fur up the steam generator and ultimately jeopardize its smooth operation!

To maintain the appliance in optimum working condition, the boiler should be descaled after every 300 hours operation at least. If this operation is not carried out at the prescribed intervals, the performance of the oven will be noticeably affected. In this event, descale the boiler without delay before too much damage is done.

OPERATIONS

15.1 • PUTTING IN THE DESCALER


- 1 • Shut off the softened water with the tap upstream, which supplies the boiler and humidifier.
- 2 • Press key 5 to activate the oven. Wait for the water in the boiler to be emptied completely and check the water comes out of the drain pipe. After a few minutes you will hear a beep warning there is no water and key 4 lights up.

- 3 • Press key 4 to stop the beep.
- 4 • After approximately 5 minutes, remove the cap “A”.
- 5 • Pour in the descaler (the dilution per litre, if necessary, should be done according to the manufacturer’s instructions) taking into account the boiler capacity (see table on page 23).

15 • DESCALING THE BOILER

OPERATIONS

ELECTRIC		GAS	
Models	Litres	Models	Litres
6 x GN 1/1	3.3	6 x GN 1/1	9
10 x GN 1/1	9	10 x GN 1/1	9
10 x GN 2/1	14	10 x GN 2/1	14

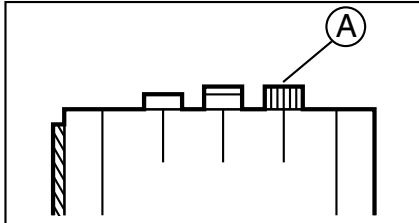

6 • Close the cap "A".

15.2 • DESCALING ACTION

7 • Turn on the water tap. The boiler fills to capacity with water.

8 • Wait for approximately 5 minutes for the boiler to fill.

9 • Switch off the appliance and leave it to stand so that the descaling agent acts for the time indicated by the manufacturer, generally at least 2 hours.

15.3 • RINSE CYCLE

10 • After this time, switch the oven on in steam mode (13). The boiler will empty; check that the boiler drains freely, otherwise contact a Lainox service technician as the drain outlet may be blocked, in which case the boiler requires professional attention.

11 • Set a temperature of 100 °C (18) and a time of 30 min (21).

12 • Press key 28.

This cycle serves to clean the boiler and the steam distribution system of the more stubborn particles of scale.

It is recommended to rinse the boiler at least twice.

Warning:

This operation should only be carried out under strict supervision by the operator!

The operator must meticulously follow the directions for the product being used as regards safety precautions (face-mask, gloves, etc.)!

16 • MAJOR SERVICING

16.1 • To ensure correct and safe operation, the oven must be inspected and serviced at least once a year by a Lainox technician or authorized service agent.

16.2 • With this in mind, customers are recommended to sign a service agreement.


17 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION

17.1 • Whenever the appliance is powered up by pressing the main switch, an electronic diagnostics routine is run automatically to check the principal functions. Assuming the appliance is in perfect working order on completion of the self-diagnosis routine, the oven temperature display shows the actual temperature in the oven, and the LEDs of the cooking mode keys all blink. At this point the cooking parameters can be entered.

17.2 • If any irregularities are discovered, on the other hand, these are indicated on the fault warning display or the oven temperature display. Error codes are extremely important when trouble cannot be remedied by the operator, since they give the service technician an indication as to the nature of the fault. The message on the display is accompanied by a beep of 5 seconds, repeated every minute, until the oven is switched off.

The main fault warning messages are:

MESSAGES

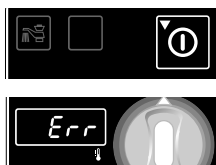

Message in the temperature display. Oven temperature probe faulty, **switch off the oven immediately** and contact a Lainox technician or authorized service agent.



No water display. This symbol lights up when there is no water reaching the appliance, in which case **check** that the shutoff valve is open and that there is water still coming from the main. If there is no supply from the main, inform the water company or agency. If there is no problem with the main, contact a Lainox technician or authorized service agent. In the meantime, the oven can still be used in convection mode.

17 • SELF-DIAGNOSIS AND FAULT IDENTIFICATION

The main fault warning messages are:

MESSAGES



The device preventing **thermal overload of the motor** has cut in. **Switch off the oven immediately** and contact a Lainox technician or authorized service agent.



The oven safety **thermostat has cut in**. **Switch off the oven** immediately and contact a Lainox technician or authorized service agent.



The boiler safety thermostat has cut in.
Switch off the oven immediately and contact a Lainox technician or authorized service agent.



Boiler preheat temperature probe faulty.
The boiler is not preheating, but the oven can still be used **under close observation, in convection mode only**, until the arrival of a service technician.



Vapour condensation temperature probe faulty. The condenser is in operation continuously, but the oven can still be used under **close observation** (increased water consumption), until the arrival of a service technician.



An **abnormally high temperature rise** has registered in the compartment housing electrical **components**. The oven can still be used under close observation, until the arrival of a service technician.



An excessive temperature rise registering in the electrical **components** compartment could result in damage to components. **Switch off the oven immediately** and contact a Lainox technician or authorized service agent.




Water has not drained from the boiler. The oven can still be used, under close observation, until the arrival of a service technician.

MESSAGES



WARNING FOR GAS MODELS

No gas. Check that the shutoff valve is open and that there is gas coming from the main. If there is no supply from the main, inform the gas company or agency. If there is no problem with the main, contact a Lainox technician or authorized service agent.



Gas appliances are fitted with ignition devices incorporating an automatic reset function. If operation is not restored automatically after several attempts, display 1 will show the error code [6] and [c] or [6] and [b] illustrated alongside. A beep warns the operator. After approx. 60 seconds a second beep tells you the burner can be switched back on.

Press key **28** and then key **40** to reset ignition.

If the fault persists, contact a Lainox technician or authorized service agent.

Note: *Burner shutdown is a safety condition. Therefore, this situation is not a sign of the appliance malfunctioning.*



Key to reset burner ignition.



VERSION H ONLY

Core probe faulty. Should the message [**err**] appear on the display of the core probe accompanied by message 9 on the fault display, it is necessary to check the connector is plugged into the socket properly. The oven can continue to be used until the arrival of a service technician, but without this accessory

If, after carefully carrying out these checks, the appliance still does not function properly, call a Lainox technician or authorized service agent.

Note: *when contacting Lainox service technicians, try to explain the fault in as much detail as possible, referring all the information indicated on the identification data plate (see page 3).*

NOTES

NOTES

NOTES

DESCRIPTION OF THE DISPLAYS AND KEYS

VERSION D

DISPLAYS, KNOBS AND KEYS

VERSION H

